


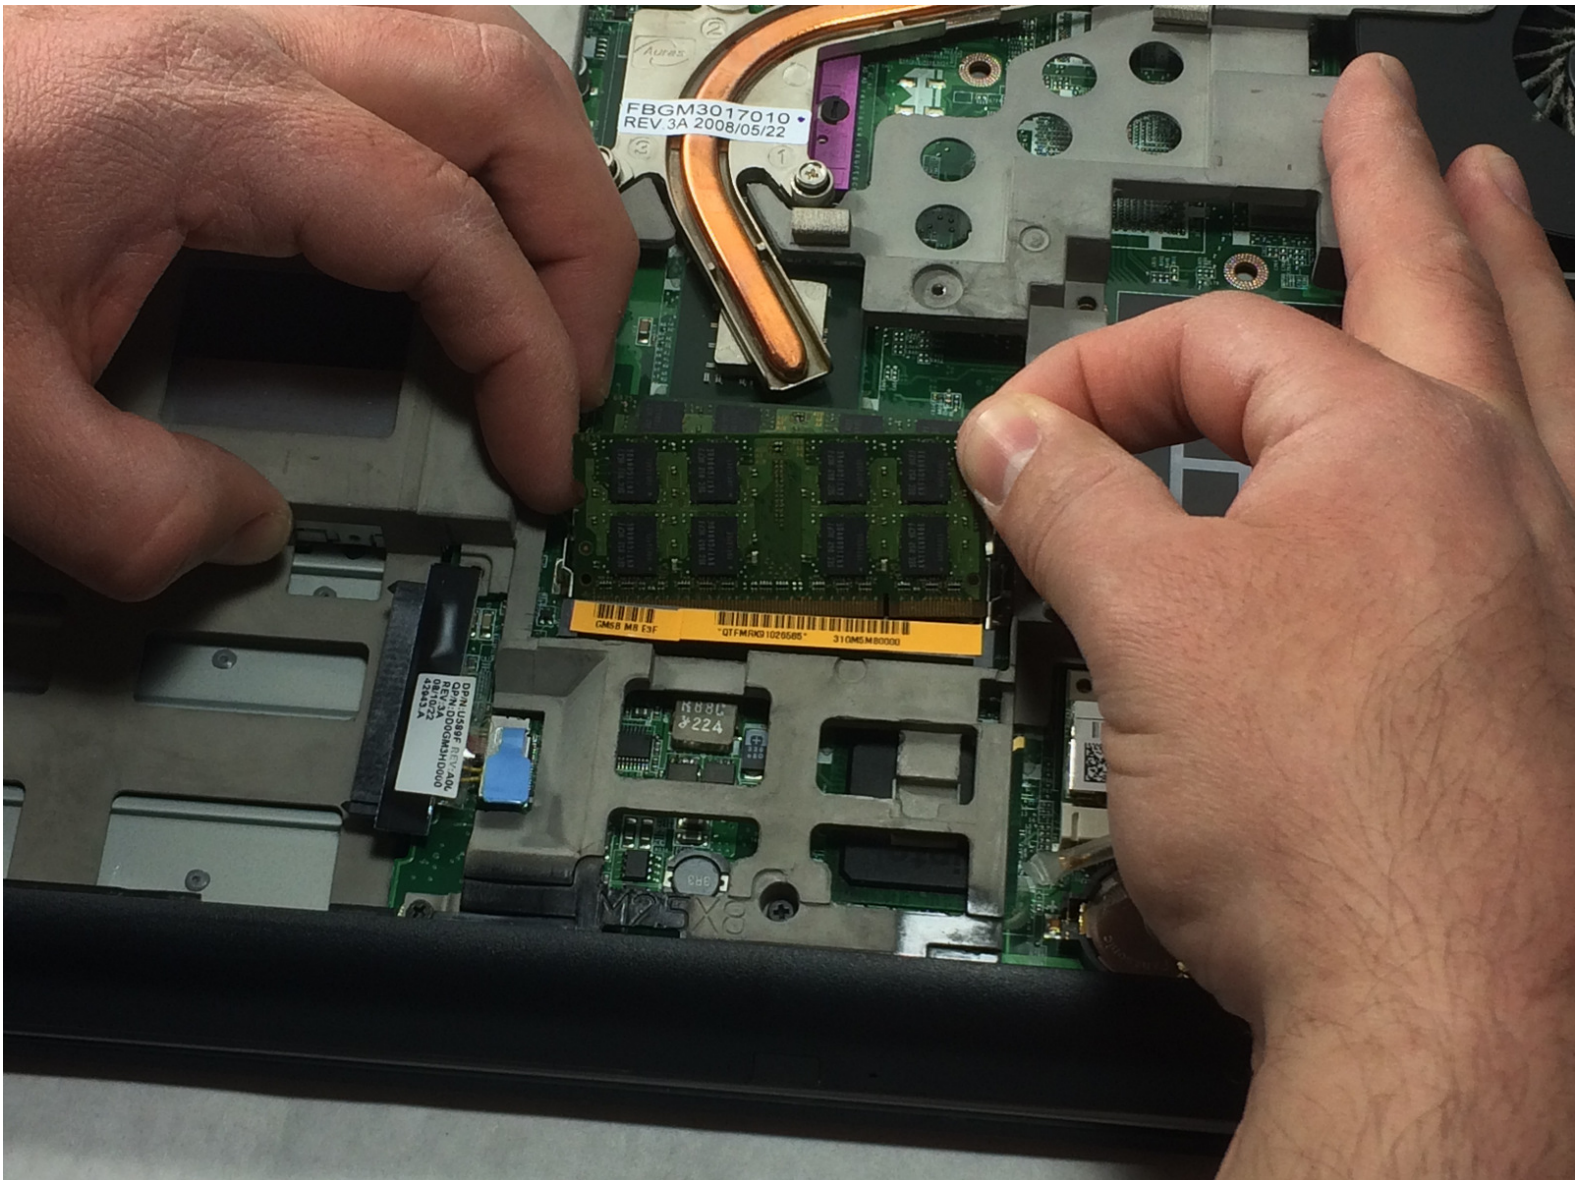

Dell Studio 1737 RAM Replacement

This guide will instruct you how to remove or replace RAM sticks in a Dell Studio 1737 Laptop

Written By: Joseph Jacavone



INTRODUCTION




RAM can be responsible for bluescreens and other difficult-to-diagnose errors; this guide will instruct you how to replace, remove, or add RAM to your Laptop

Step 1 — Battery





- Slide the battery release slider all the way to the right and push the battery straight out of the back of the computer

Step 2 — Back Panel

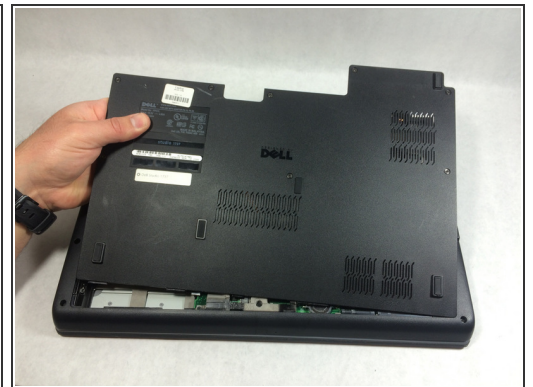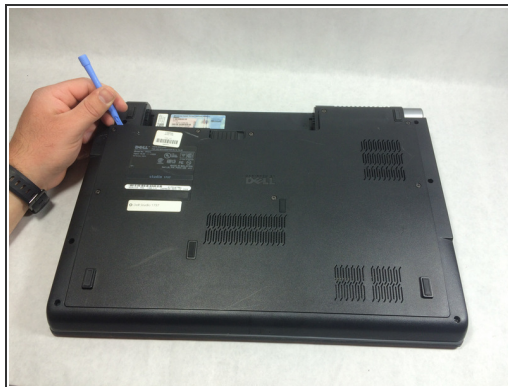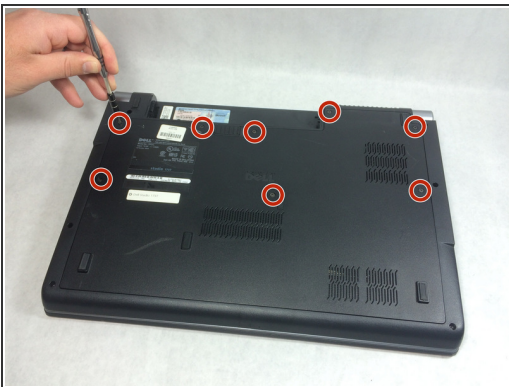

- Unscrew the 8 Phillips head screws marked in the photo
- ⓘ Even when the screws are fully detached, they will not come out of the panel
- Use a plastic opening tool to pry the panel away from the laptop body
- Lift panel up and away

Step 3 — RAM

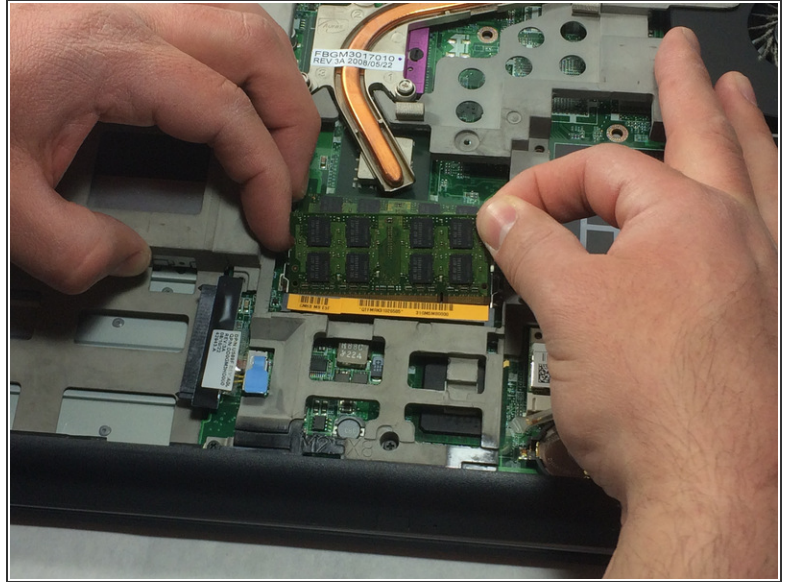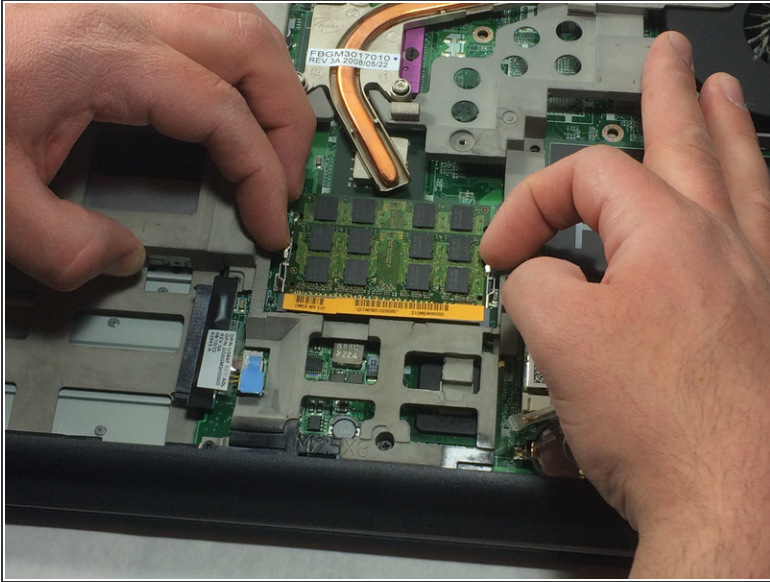

- Release RAM sticks by pulling clips out in opposite directions of each other.
- Pull RAM stick up and out.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-08-31 12:26:13 PM.